




# Quick Guide

# HAND CONTROL

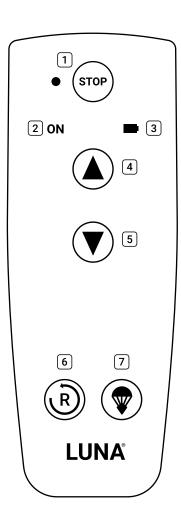

# Emergency stop

Press to activate emergency stop. Red light indicates activation. Press and hold Reset button (6) to deactivate emergency stop.

#### ON

Green light is on when lift is active. All lights turn off after approx. 3 minutes of no use.

#### **BATTERY**

- Green: 100%
- Orange: 50%
- Red: Must be charged

### 4 UP

## 5 DOWN

#### RESET

Press and hold for 5 seconds to deactivate emergency stop. The light turns off, and all buttons work again.

### 7 EMERGENCY LOWERING

#### If Up/Down is not working.


Press and hold emergency lowering button; lowering starts after 5 seconds. A constant beep will sound during lowering.

#### **Important**

### When not in use. charge LUNA® X5 by:

- · Placing the hand control in the charging station.
- · Connecting the charger cable to the side panel.

If track system is equipped with ITC (In-Track Charging), charging occurs automatically.

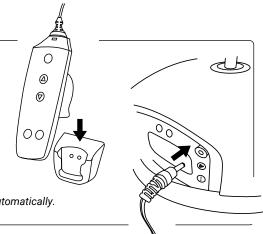

#### **Emergency lowering**

## If the electric emergency lowering is not working.

Use the manual emergency lowering following these steps:

- Pull out the emergency key located on the side of the LUNA® X5.
- **b** Insert the manual emergency key into the key hole.
- Turn the manual emergency key counterclockwise for manual lowering.

